

# Eddie Bauer - Long Sleeve Performance Fishing Shirt

PRODUCT MEASUREMENTS

	XS	S	M	L	XL	2XL	3XL	4XL
Chest Width	20 1/2	22	23 1/2	25	26 1/2	28	30	32
Sleeve Length	33 3/4	34 1/2	35 1/4	36	36 3/4	37 1/2	38 1/4	39
Body Length at Back	27 1/2	28 1/2	29 1/2	30 1/2	31 1/2	32 1/2	33	33 1/2
Pocket Height	8 1/4	8 1/2	8 1/2	8 1/2	8 1/2	8 1/2	8 3/4	8 3/4
Pocket Width	6	6	6 1/4	6 1/4	6 1/4	6 1/4	6 1/2	6 1/2
Neck	16 3/4	16 3/4	17 1/4	17 3/4	18 3/4	19 3/4	20 3/4	21 3/4

CHEST WIDTH

Measured across the chest one inch below armhole when laid flat.

SLEEVE LENGTH

Start at center of neck and measure down shoulder, down sleeve to hem.

BODY LENGTH AT BACK

Measured from high point shoulder to finished hem at back.

POCKET HEIGHT

Measure from top to bottom at center.

POCKET WIDTH

Measure from side to side at top edge.

NECK

Measured from center of button to center of buttonhole.

# Eddie Bauer - Short Sleeve Performance Fishing Shirt

PRODUCT MEASUREMENTS

	XS	S	M	L	XL	2XL	3XL	4XL
Chest Width	20 1/2	22	23 1/2	25	26 1/2	28	30	32
Sleeve Length	19 1/2	20 1/4	21	21 1/2	22 1/8	22 7/8	23 5/8	24 3/8
Body Length at Back	27 1/2	28 1/2	29 1/2	30 1/2	31 1/2	32 1/2	33	33 1/2
Pocket Height	8 1/4	8 1/2	8 1/2	8 3/4	8 3/4	8 3/4	9	9
Pocket Width	6	6	6 1/4	6 1/4	6 1/4	6 1/4	6 1/2	6 1/2
Neck	16 3/4	16 3/4	17 1/4	17 3/4	18 3/4	19 3/4	20 3/4	21 3/4

CHEST WIDTH

Measured across the chest one inch below armhole when laid flat.

SLEEVE LENGTH

Start at center of neck and measure down shoulder, down sleeve to hem.

BODY LENGTH AT BACK

Measured from high point shoulder to finished hem at back.

POCKET HEIGHT

Measure from top to bottom at center.

POCKET WIDTH

Measure from side to side at top edge.

NECK

Measured from center of button to center of buttonhole.